

DIN-DMX-5A **CV DMX/RDM DECODER** (DIN Rail, Screw Dual-use)



DIN-DMX-5A DIN rail DMX decoder have 3 digits digital tube to display DMX address, simple and intuitive read and write DMX address, meanwhile have the self-testing pattern function. The latest version add the international standard RDM remote device management protocol, supports DMX512 signal bi-directional communication, achieves remote management, read and write DMX decoder first address and status monitoring decoder working(DMX master controller must recognize the RDM protocol).


DIN-DMX-5A can work with DMX512 console; realize 0-100% brightness and various changing effects can control single color, bi-colors, RGB LED light.

1. Product Parameter:

DIN-DMX-5A CV DMX Decoder:

- Input Signal: RDM, DMX512
- Input Voltage: DC5V~DC24V
- Max Load Current: 5A ×3CH Max 15A
- Max Output Power: 75W/180W/360W/(5V/12V/24V)
- Dimming Range: 0~100%
- Frame Rate: Max 850 FPS
- Mounting: DIN Rail or Screw
- DIN Rail Mounting Size: TS-35/7.5 or TS-35/15
- Working Temperature: -30℃~55℃
- Dimensions: L112×W35×H67(mm)
- Package Size: L114×W37×H70(mm)
- Weight (G.W): 120g

2. Product Size:

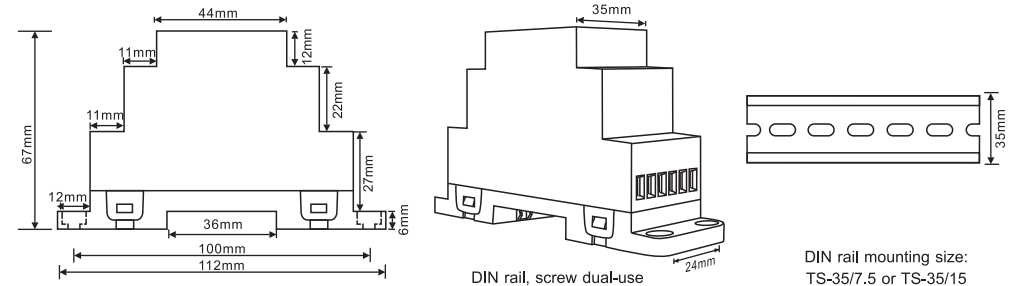


3. Function Key:

Running light

The running lights flash quickly when input DMX signal. Flash frequency depends on received frame rate. The running light flashes as usual without DMX input.

M KEY

Short press: enter DMX decoder mode.
Long press: enter self-testing scene mode.

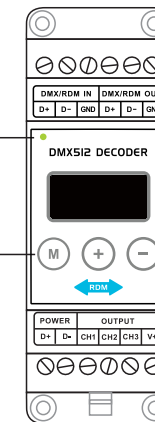

A. DMX Decoder Mode.


Address Setting:

In DMX Decoder Mode, first press "+" or "-" key to enter address setting. Changing the DMX initial address when the 3 address value start to flicker. (Range:001-512)


Short press +, add one more address, long press+, address increase quickly.

Short press -, subtract one more address, long press-, address decrease quickly.


Short press M to quit.

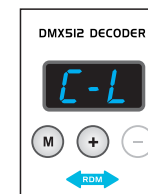

Long press M and + key at the same time, set the brightness output to linearity curve (C-L).

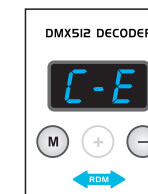

Long press M and - key at the same time, set the brightness output to Gamma curve (C-E)

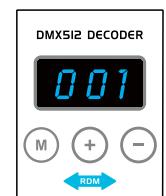

Long press + and - key at the same time, check the present luminosity curve.

B. Self-testing Scene Mode.

Long press "M" key to enter self-testing scene mode.



Switch changing modes by pressing + - key.


NO.	Digital Tube Display (press +/- to switch)	MODE	Description
1	P-1	Static RED	
2	P-2	Static Green	
3	P-3	Static Blue	
4	P-4	Static Yellow	RED+GREEN=YELLOW
5	P-5	Static Purple	RED+BLUE=PURPLE
6	P-6	Static Cyan	GREEN+BLUE=CYAN
7	P-7	Static White	RED+GREEN+BLUE=WHITE
8	P-8	7 Color Skipping	Fixed Speed, 1 color per second,
9	P-9	7 Color Smooth	Fixed Speed, transient time 2 second, residence time 1 second

C. Restore the Default Parameter: Long pressⓂ+ - keys at the same time, Restore the default parameter, digital tube display "RES".



Default parameters: DMX decoder mode, DMX base address is 1, Gamma curve, self-test in No.1 pattern status.

4. Conjunction Diagram:

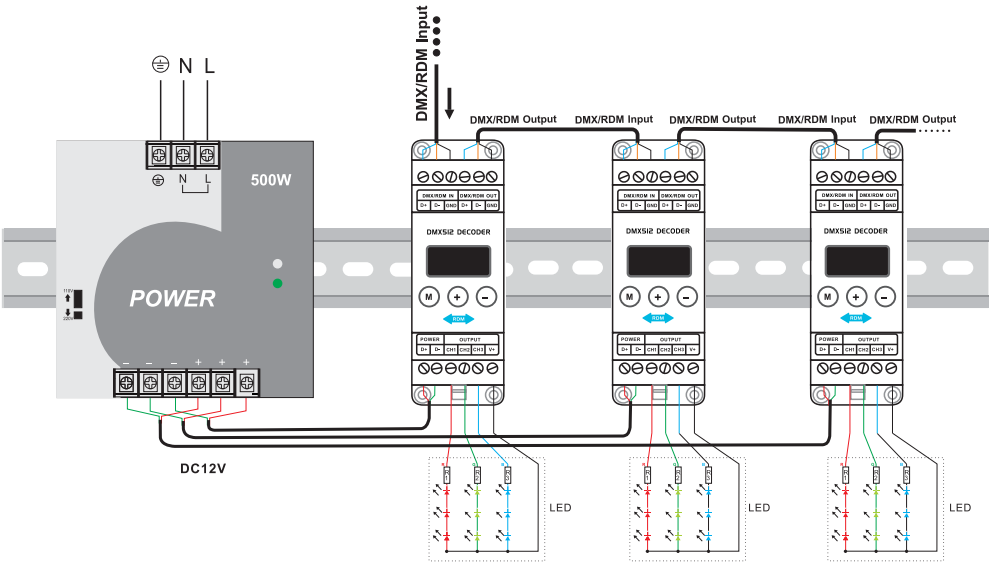

5. Attention:

- 1) The product shall be installed and serviced by a qualified person.
- 2) This product is non-waterproof. Please avoid the sun and rain. When installed outdoors please ensure it is mounted in a water proof enclosure.
- 3) Good heat dissipation will prolong the working life of the controller. Please ensure good ventilation.
- 4) Please check if the output voltage of any LED power supplies used comply with the working voltage of the product.
- 5) Please ensure that adequate sized cable is used from the controller to the LED lights to carry the current. Please also ensure that the cable is secured tightly in the connector.
- 6) Ensure all wire connections and polarities are correct before applying power to avoid any damages to the LED lights.
- 7) If a fault occurs please return the product to your supplier. Do not attempt to fix this product by yourself.

6. Warranty Agreement:

- 1) We provide lifelong technical assistance with this product:
 - A 5-year warranty is given from the date of purchase. The warranty is for free repair or replacement and covers manufacturing faults only.
 - For faults beyond the 5-year warranty we reserve the right to charge for time and parts.
- 2) Warranty exclusions below:
 - Any man-made damages caused from improper operation, or connecting to excess voltage and overloading.
 - The product appears to have excessive physical damage.
 - Damage due to natural disasters and force majeure.
 - Warranty label, fragile label and unique barcode label have been damaged.
 - The product has been replaced by a brand new product.
- 3) Repair or replacement as provided under this warranty is the exclusive remedy to the customer. LTECH shall not be liable for any incidental or consequential damages for breach of any stipulation in this warranty.
- 4) Any amendment or adjustment to this warranty must be approved in writing by LTECH only.

★ This manual only applies to this model. Ltech reserves the right to make changes without prior notice.